






Instructions

Required Tools

1. Phillips Screwdriver (Manual or Electric)


Assembly

You should have 6 wooden pieces and a packet of screws

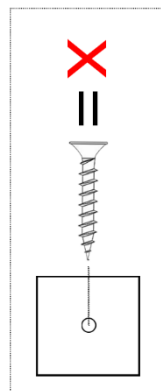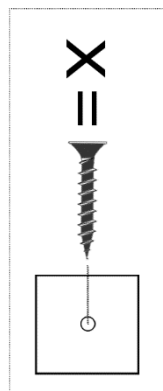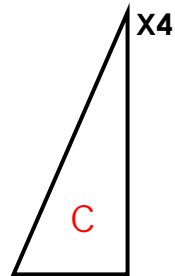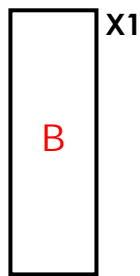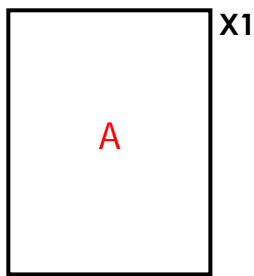

Step 1

Take your C pieces and line them up with the pre-drilled holes in your A piece. There are 12 holes in total, each shown by the "X" on the diagram opposite. Using blackscrews, attach each of the C pieces to the A piece. You will find it easiest to install the two outer pieces first, followed by the two inner pieces.

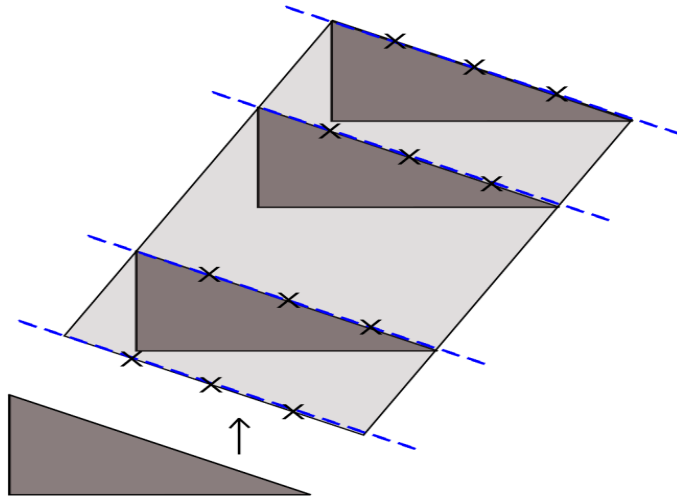

Step 2

Take your B piece and secure it into place as shown. Use your remaining 4 blackscrews for the 4 holes in the top of the A piece, followed by your 6 goldscrews for the holes in the back of the B piece.

